

KENWOOD TM-271A

QUICK PROGRAMING

Turn radio on by pushing in on the Volume control knob on the left side of the radio.

Push the VFO button so no memory channel number shows on the right side of the display.

If the MHz number (the first three digits) in the display is incorrect, it can be changed by pushing the Menu (tuning) button in. The third digit will flash. Rotate the tuning knob until the desired MHz reading is obtained. Push the Menu (tuning) button to set the MHz.

Rotate the tuning knob to set the rest of the desired frequency.

If this frequency setting is for a repeater, and you need to get the proper offset, (- or +), push the F key below the tuning knob, then push the tuning knob. You will see a number flashing on the right side. Rotate the Tuning knob until the number is 5 and the display shows SFT. Push the Tuning knob and part of the display will flash. Rotate the tuning knob until you get the desired Shift, (OFF for simplex, or + or -). Once you have the proper Shift showing push the Tuning button. The Shift you selected should show over the display and the 5 should flash again. Push the F key to store this Shift and return to the frequency display.

If you need to transmit a PL tone for the repeater, push the F key and the CALL button so a T appears above the 1 in the frequency display. You may have to push the F and CALL key a few times for the T to appear.

To set the PL Tone frequency, push the F key and then the Tuning button. Once again a number will flash on the right of the display. Rotate the tuning knob until a 2 is flashing. Push the Tuning button and the tone frequency will momentarily flash. Rotate the tuning knob until the desired PL Tone frequency is displayed. Push the F key to lock this value in.

To place the information in a memory channel, press the F key and rotate the tuning knob to a desired memory position number. Push the MR key two times, and that locks the information into the desired location.

When you push the MR key, notice the memory number on the right goes away. Not to worry. Simply push the MR key again, and by using the tuning knob you will tune through all the memory channels.

To SCAN all the channels that are in the Memories, Push and Hold the MR key. To stop scanning, key the microphone or momentarily push the MR key.