

Kenwood TH-K2A Programming steps

1. Press VFO Key
2. Press # key
3. Enter 6 digit frequency
4. Press Menu key
5. Turn knob to memory "3"
6. Press Menu Key so PL blinks
7. Turn knob to PL frequency
8. Press Menu key
9. Turn knob to memory (2), (6), and (8) to be sure all settings correct
10. Press VFO key to exit memory mode
11. Press F key then MR key
12. Turn knob to desired memory number
13. Press MR key to store frequency in that memory position