

Yaesu VX-6 QuickSheet™

© 2005 – 2012 by joel Sampson / N5LXI

Select	Key(s)	Notes
VFO / Memory	[V/M]	Toggles
Weather receive	[F/W], [9], [BAND] to select WX CH	[V/M] to exit
Marine receive	[F/W], [9], [BAND] to select Marine	[V/M] to exit
Toggle reverse split	[HM/RV]	
Frequency display	[MONI] (on side below PTT)	Useful in Alpha mode
Squelch	[F/W], Hold [MONI] + set w knob, PTT	0 thru 15
Set (from VFO Mode)	Key(s)	Notes
Band	[BAND]	[1] thru [b] (in hex)
Frequency	Enter frequency in MHz on keypad	Six digits or turn knob
Tone – turn on CTCSS	[F/W], [MODE], select TONE w knob, [PTT]	OFF / TONE / TSQL / more
Tone – select frequency	[F/W], 2, select with knob, [2]	Tone in Hz
Offset	[F/W], 6, select with knob, [PTT]	Should auto set
Transmit power level	[F/W], [Atom] as desired	Set High and 3 Low levels
Scan VFO	[BAND] (1 sec)	
Store to memory	[F/W] (1 sec), select # w knob, [F/W]	Stores all parameters
Memories		
Direct access memory	memory_location, [V/M]	From MEMORY mode
Change from bank to all	[BANK]	MEMORY / bank-name
Change banks	[F/W], [BANK], select with knob, [BANK]	Bank names are displayed
Type of scan	Hold [BAND] + select with knob	BAND / range-group
Scan	[BAND] (2 sec)	PTT to exit scan

Verified Dallas/Fort Worth repeater list and more at www.N5LXI.com.

Please e-mail me any corrections or comments from my web site.

Last Revised: 06/28/16