

YAESU FT-8800

SIMPLEX MEMORY

press V/M, select freq  
press and hold "set" ½ sec  
press 'set', press PTT

SIMPLEX W/ TONE

press V/M, select freq  
press 'set' rotate dial to #2  
press dial, rotate to OFF  
press dial, rotate to 41  
press dial, rotate to "ENC"  
press dial, rotate to 40 (tone F)  
press dial, rotate to desired  
tone freq, press and hold 1/2 sec  
press and hold "set" ½ sec  
press 'set', press PTT

RON GREEN KG6RKG

YAESU FT-8800

REPEATER MEMORY

Press V/M, select freq  
Press 'set', rotate dial to 41  
Press dial, rotate to 'ENC'  
Press dial, rotate to 40 (tone F)  
Press dial, rotate to the tone freq  
Press and hold dial for ½ sec  
Press and hold 'set' ½ sec  
Press 'set', press PTT

POWER CHANGE

Press "low" button

WIRES

Press left "vol" dial  
"Enc" on-no "ENC" off

DELETE MEMORY

Press V/M, press & hold "set"  
½ sec, Rotate dial to memory #  
Press SCN