

YAESU VX 170
Repeater Memory
Press VFO, select freq.
Press "F" then press "1"
Rotate dial to 'TONE'
Press 'PTT then press "F"
Press "2" then rotate dial
to desired tone freq.
Press "F" 1 second
Press "F" again, Press PTT

Squelch
Press "F" then "0"
Rotate dial to "34"
Press "F" then rotate
dial to squelch level
Press PTT

YAESU VX 170
Simplex Memory
Press VFO, select freq.
Press "F" 1 second
Press "F" again Press PTT

Power Level
Press "F" then Press "3"
Rotate dial to desired
power level, Press PTT

Battery level
Press "F" then "0"
Rotate Dial to "12"
Press "F" to display Volt
Press "F" then PTT
Lock
Press "6" 1 sec